

NAND512R3A2C NAND512R4A2C NAND512W3A2C NAND512W4A2C

512 Mbit, 528 byte/264 word page, 1.8 V/3 V, NAND Flash memories

Features

- High density NAND Flash memories
 - 512 Mbit memory array
 - Cost effective solutions for mass storage applications
- NAND interface
 - x 8 or x 16 bus width
 - Multiplexed Address/ Data
- Supply voltage: 1.8 V, 3.0 V
- Page size
 - x 8 device: (512 + 16 spare) bytes x 16 device: (256 + 8 spare) words
- Block size
 - x 8 device: (16 K + 512 spare) bytes
 - x 16 device: (8 K + 256 spare) words
- Page Read/Program
 - Random access: 12 μs (3 V)/15 μs (1.8 V) (max)
 - Sequential access: 30 ns (3 V)/50 ns (1.8 V) (min)
 - Page Program time: 200 µs (typ)
- Copy Back Program mode
- Fast Block Erase: 2 ms (typ)
- Status Register
- Electronic signature
- Chip Enable 'don't care'
- Serial Number option

- TSOP48 12 x 20 mm VFBGA55 8 x 10 x 1 mm VFBGA63 9 x 11 x 1 mm Hardware Data Protection
- - Program/Erase locked during Power transitions
- Data integrity
 - 100,000 Program/Erase cycles (with
 - 10 years Data Retention
- ECOPACK® packages
- Development tools
 - Error Correction Code models
 - Bad Blocks Management and Wear Leveling algorithms
 - Hardware simulation models

Table 1. **Device summary**

Reference	Part number
	NAND512R3A2C
NANDE42 A2C	NAND512R4A2C ⁽¹⁾
NAND512-A2C	NAND512W3A2C
	NAND512W4A2C ⁽¹⁾

1. x16 organization only available for MCP.

January 2008 Rev 2 1/51

NAND512-A2C

Contents

1	Desc	cription								
2	Mem	Memory array organization11								
3	Sign	Signal descriptions								
	3.1	Inputs/Outputs (I/O0-I/O7)								
	3.2	Inputs/Outputs (I/O8-I/O15)								
	3.3	Address Latch Enable (AL)								
	3.4	Command Latch Enable (CL)								
	3.5	Chip Enable (E)								
	3.6	Read Enable ($\overline{\mathbb{R}}$)								
	3.7	Write Enable (W)								
	3.8	Write Protect (WP)								
	3.9	Ready/Busy (RB)								
	3.10	V _{DD} supply voltage								
	3.11	V _{SS} ground								
4	Bus	operations								
	4.1	Command Input								
	4.2	Address Input								
	4.3	Data Input								
	4.4	Data Output								
	4.5	Write Protect								
	4.6	Standby 16								
5	Com	mand set								
6	Devi	ce operations								
	6.1	Pointer operations								
	6.2	Read Memory Array								
		6.2.1 Random Read								
		6.2.2 Page Read								

	6.3	Page Program	23					
	6.4	Copy Back Program	24					
	6.5	Block Erase	25					
	6.6	Reset	25					
	6.7	Read Status Register	26					
		6.7.1 Write Protection Bit (SR7)	26					
		6.7.2 P/E/R Controller Bit (SR6)	26					
		6.7.3 Error Bit (SR0)	26					
		6.7.4 SR5, SR4, SR3, SR2 and SR1 are reserved	26					
	6.8	Read Electronic Signature	27					
7	Softv	are algorithms 2	28					
	7.1	Bad Block management	28					
	7.2	NAND Flash memory failure modes	28					
	7.3	Garbage collection	30					
	7.4	Wear-leveling algorithm	30					
	7.5	Error Correction Code	30					
	7.6	Hardware simulation models 3	31					
		7.6.1 Behavioral simulation models	31					
		7.6.2 IBIS simulations models	31					
8	Prog	am and erase times and endurance cycles 3	32					
9	Maxi	num rating	3					
10	DC a	nd AC parameters	34					
- 0	10.1	Ready/Busy signal electrical characteristics						
	10.1	Data Protection						
	10.2	Data i Totection	ŦŪ					
11	Pack	Package mechanical						
12	Orde	rdering information49						
13	Revision history							

List of tables NAND512-A2C

List of tables

l able 1.	Device summary	. 1
Table 2.	Product description	. 7
Table 3.	Signal names	. 8
Table 4.	Valid blocks	11
Table 5.	Bus operations	16
Table 6.	Address Insertion, x8 devices	16
Table 7.	Address Insertion, x16 devices	16
Table 8.	Address definition	17
Table 9.	Commands	18
Table 10.	Copy Back Program addresses	24
Table 11.	Status Register bits	27
Table 12.	Electronic signature	27
Table 13.	NAND Flash failure modes	29
Table 14.	Program, Erase Times and Program Erase Endurance Cycles	32
Table 15.	Absolute Maximum Ratings	33
Table 16.	Operating and AC measurement conditions	34
Table 17.	Capacitance	34
Table 18.	DC characteristics, 1.8 V devices	35
Table 19.	DC Characteristics, 3V devices	36
Table 20.	AC characteristics for Command, Address, Data Input	36
Table 21.	AC Characteristics for operations	37
Table 22.	TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package mechanical data	47
Table 23.	VFBGA63 9x11mm - 6x8 active ball array, 0.80mm pitch, package mechanical data	48
Table 24.	Ordering information scheme	49
Table 25	Document revision history	50

NAND512-A2C List of figures

List of figures

Figure 1.	Logic diagram	7
Figure 2.	Logic block diagram	
Figure 3.	TSOP48 connections - x8 devices	9
Figure 4.	FBGA63 connections - x8 devices (top view through package)	10
Figure 5.	Memory array organization	
Figure 6.	Pointer operations	19
Figure 7.	Pointer operations for programming	20
Figure 8.	Read (A,B,C) operations	21
Figure 9.	Read block diagrams	22
Figure 10.	Page Program operation	23
Figure 11.	Copy Back operation	24
Figure 12.	Block Erase operation	25
Figure 13.	Bad Block management flowchart	29
Figure 14.	Garbage collection	30
Figure 15.	Error Detection	31
Figure 16.	Equivalent testing circuit for AC characteristics measurement	35
Figure 17.	Command Latch AC waveforms	
Figure 18.	Address Latch AC waveforms	
Figure 19.	Data Input Latch AC waveforms	
Figure 20.	Sequential Data Output after Read AC waveforms	39
Figure 21.	Read Status Register AC waveforms	
Figure 22.	Read Electronic Signature AC waveform	
Figure 23.	Page Read A/ Read B operation AC waveform	41
Figure 24.	Read C operation, One Page AC waveform	42
Figure 25.	Page Program AC waveform	
Figure 26.	Block Erase AC waveform	
Figure 27.	Reset AC waveform	
Figure 28.	Ready/Busy AC waveform	
Figure 29.	Ready/Busy load circuit	
Figure 30.	Resistor value versus waveform timings for Ready/Busy signal	
Figure 31.	Data Protection	
Figure 32.	TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package outline	
Figure 33.	VFBGA63 9x11mm - 6x8 active ball array, 0.80mm pitch, package outline	48

Description NAND512-A2C

1 Description

The NAND Flash 528 Byte/ 264 Word Page is a family of non-volatile Flash memories that uses the Single Level Cell (SLC) NAND cell technology. It is referred to as the Small Page family. The NAND512R3A2C, NAND512R4A2C, NAND512W3A2C, and NAND512W4A2C have a density of 512 Mbits and operate with either a 1.8V or 3V voltage supply. The size of a Page is either 528 Bytes (512 + 16 spare) or 264 Words (256 + 8 spare) depending on whether the device has a x8 or x16 bus width.

The address lines are multiplexed with the Data Input/Output signals on a multiplexed x8 or x16 Input/Output bus. This interface reduces the pin count and makes it possible to migrate to other densities without changing the footprint.

To extend the lifetime of NAND Flash devices it is strongly recommended to implement an Error Correction Code (ECC). The use of ECC correction allows to achieve up to 100,000 program/erase cycles for each block. A Write Protect pin is available to give a hardware protection against program and erase operations.

The devices feature an open-drain Ready/Busy output that can be used to identify if the Program/Erase/Read (P/E/R) Controller is currently active. The use of an open-drain output allows the Ready/Busy pins from several memories to be connected to a single pull-up resistor.

A Copy Back command is available to optimize the management of defective blocks. When a Page Program operation fails, the data can be programmed in another page without having to resend the data to be programmed.

The devices are available in the following packages:

- TSOP48 12 x 20mm
- VFBGA63 (9 x 11 x 1mm, 6 x 8 ball array, 0.8mm pitch)

In order to meet environmental requirements, Numonyx offers the devices in ECOPACK® packages. ECOPACK packages are Lead-free. The category of second Level Interconnect is marked on the package and on the inner box label, in compliance with JEDEC Standard JESD97. The maximum ratings related to soldering conditions are also marked on the inner box label.

All devices have the Chip Enable Don't Care option, which allows the code to be directly downloaded by a microcontroller, as Chip Enable transitions during the latency time do not stop the read operation.

A Serial Number option, allows each device to be uniquely identified. The Serial Number options is subject to an NDA (Non Disclosure Agreement) and so not described in the datasheet. For more details of this option contact your nearest Numonyx Sales office.

For information on how to order these options refer to *Table 24: Ordering information scheme*. Devices are shipped from the factory with Block 0 always valid and the memory content bits, in valid blocks, erased to '1'.

See *Table 2: Product description*, for all the devices available in the family.

Numonyx


NAND512-A2C Description

Table 2. Product description

								Timings																							
Reference	Part Number	Density	Bus Width	Page Size	Block Size	Memory Array	Operating Voltage	Random Access Max	Sequential Access Min	Page Program Typical	Block Erase Typica I	Package																			
	NAND512R3A2C		x8	512+16	16K+512	16K+512	16K+512	16K+512	16K+512	512	1.7to 1.95V	15µs	50ns	200µs		TSOP48															
NAND512-	NAND512W3A2C	512Mbit	XO	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes	Bytes Bytes		es Bytes	Bytes Bytes	rtes Bytes	Bytes	s 32 Pages x	2.7 to 3.6V	12µs	30ns	200µs	2ms	VFBGA63				
A2C	NAND512R4A2C	STZIVIDIL	x16	256+8		8K+256	8K+256	4096 Blocks	1.7 to 1.95V	15µs	50ns	200µs	-	(1)																	
	NAND512W4A2C		X10	Words	Words		2.7 to 3.6V	12µs	30ns	200µs		. ,																			

^{1.} x16 organization only available for MCP.

Figure 1. Logic diagram

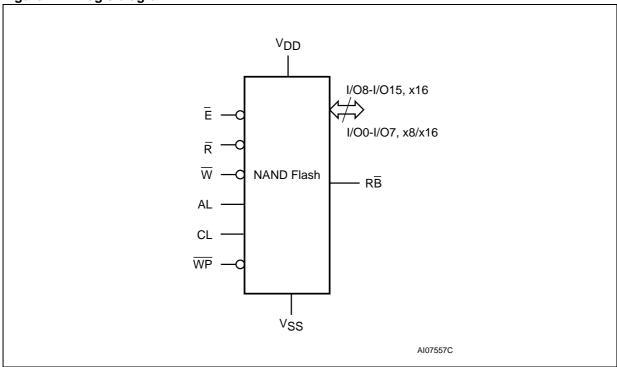


Description NAND512-A2C


Table 3. Signal names

I/O8-15	Data Input/Outputs for x16 devices
1/00-7	Data Input/Outputs, Address Inputs, or Command Inputs for x8 and x16 devices
AL	Address Latch Enable
CL	Command Latch Enable
Ē	Chip Enable
R	Read Enable
RB	Ready/Busy (open-drain output)
W	Write Enable
WP	Write Protect
V _{DD}	Supply Voltage
V _{SS}	Ground
NC	Not Connected Internally
DU	Do Not Use

Figure 2. Logic block diagram

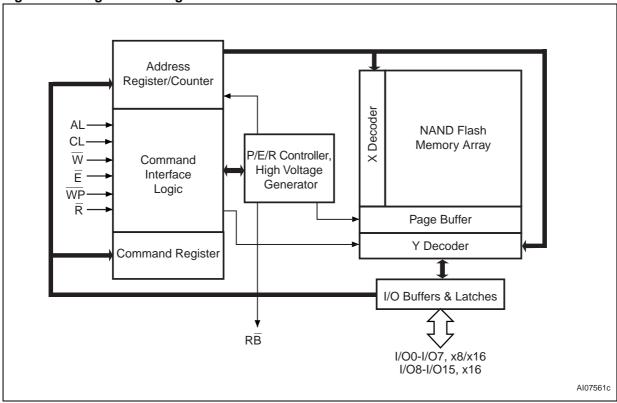


NAND512-A2C Description

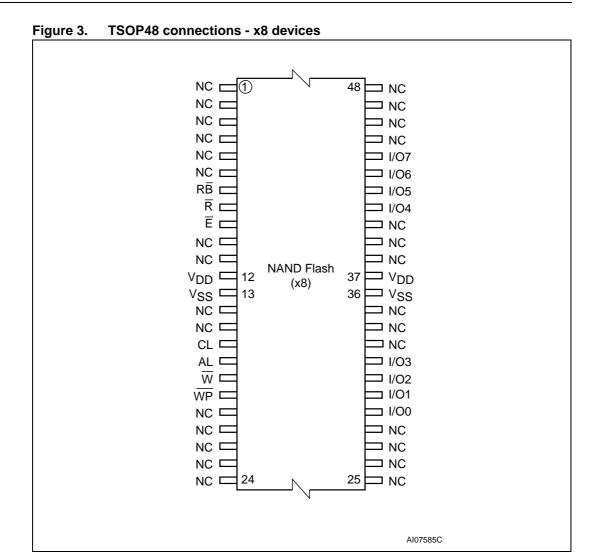

Numonyx 9/51

Description NAND512-A2C

Figure 4. FBGA63 connections - x8 devices (top view through package)

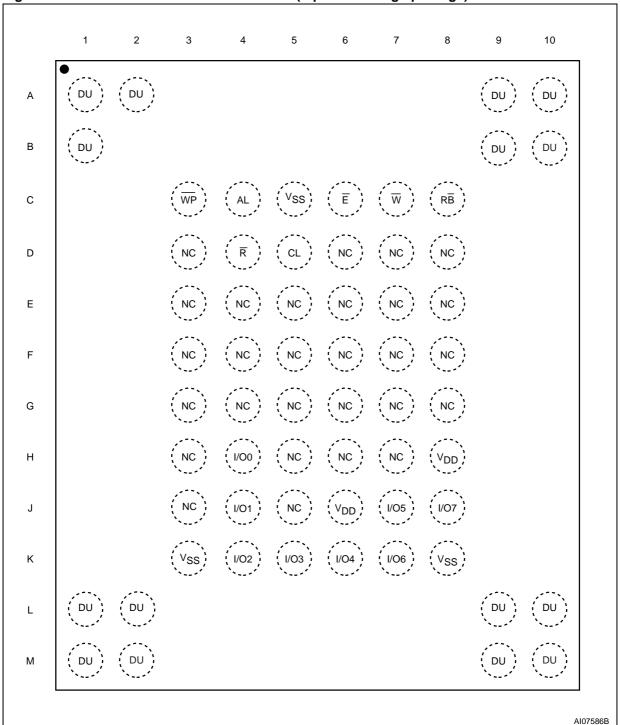

2 Memory array organization

The memory array is made up of NAND structures where 16 cells are connected in series.

The memory array is organized in blocks where each block contains 32 pages. The array is split into two areas, the main area and the spare area. The main area of the array is used to store data whereas the spare area is typically used to store Error correction Codes, software flags or Bad Block identification.

In x8 devices the pages are split into a main area with two half pages of 256 Bytes each and a spare area of 16 Bytes. In the x16 devices the pages are split into a 256 Word main area and an 8 Word spare area. Refer to *Figure 5: Memory array organization*.

Bad blocks

The NAND Flash 528 Byte/ 264 Word Page devices may contain Bad Blocks, that is blocks that contain one or more invalid bits whose reliability is not guaranteed. Additional Bad Blocks may develop during the lifetime of the device.

The Bad Block Information is written prior to shipping (refer to Section 7.1: Bad Block management for more details).

Table 4 shows the minimum number of valid blocks in each device. The values shown include both the Bad Blocks that are present when the device is shipped and the Bad Blocks that could develop later on.


These blocks need to be managed using Bad Blocks Management, Block Replacement or Error Correction Codes (refer to Section 7: Software algorithms).

Table 4. Valid blocks

Density of device	Min	Max
512 Mbits	4016	4096

Numonyx 11/51

Figure 5. Memory array organization

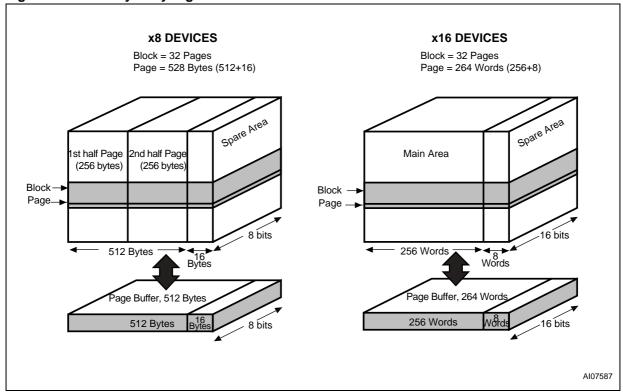

NAND512-A2C Signal descriptions

3 Signal descriptions

See Figure 1: Logic diagram, and Table 3: Signal names, for a brief overview of the signals connected to this device.

3.1 Inputs/Outputs (I/O0-I/O7)

Input/Outputs 0 to 7 are used to input the selected address, output the data during a Read operation or input a command or data during a Write operation. The inputs are latched on the rising edge of Write Enable. I/O0-I/O7 are left floating when the device is deselected or the outputs are disabled.

3.2 Inputs/Outputs (I/O8-I/O15)

Input/Outputs 8 to 15 are only available in x16 devices. They are used to output the data during a Read operation or input data during a Write operation. Command and Address Inputs only require I/O0 to I/O7.

The inputs are latched on the rising edge of Write Enable. I/O8-I/O15 are left floating when the device is deselected or the outputs are disabled.

3.3 Address Latch Enable (AL)

The Address Latch Enable activates the latching of the Address inputs in the Command Interface. When AL is high, the inputs are latched on the rising edge of Write Enable.

3.4 Command Latch Enable (CL)

The Command Latch Enable activates the latching of the Command inputs in the Command Interface. When CL is high, the inputs are latched on the rising edge of Write Enable.

3.5 Chip Enable (\overline{E})

The Chip Enable input activates the memory control logic, input buffers, decoders and read circuitry. When Chip Enable is low, V_{II} , the device is selected.

If Chip Enable goes High (V_{IH}) while the device is busy, the device remains selected and does not go into standby mode.

3.6 Read Enable (\overline{R})

The Read Enable, \overline{R} , controls the sequential data output during Read operations. Data is valid t_{RLQV} after the falling edge of \overline{R} . The falling edge of \overline{R} also increments the internal column address counter by one.

Signal descriptions NAND512-A2C

3.7 Write Enable (\overline{W})

The Write Enable input, \overline{W} , controls writing to the Command Interface, Input Address and Data latches. Both addresses and data are latched on the rising edge of Write Enable.

During power-up and power-down a recovery time of 10µs (min) is required before the Command Interface is ready to accept a command. It is recommended to keep Write Enable high during the recovery time.

3.8 Write Protect (WP)

The Write Protect pin is an input that gives a hardware protection against unwanted program or erase operations. When Write Protect is Low, V_{IL} , the device does not accept any program or erase operations.

It is recommended to keep the Write Protect pin Low, V_{II} , during power-up and power-down.

3.9 Ready/Busy ($R\overline{B}$)

The Ready/Busy output, $R\overline{B}$, is an open-drain output that can be used to identify if the P/E/R Controller is currently active.

When Ready/Busy is Low, V_{OL} , a read, program or erase operation is in progress. When the operation completes Ready/Busy goes High, V_{OH} .

The use of an open-drain output allows the Ready/Busy pins from several memories to be connected to a single pull-up resistor. A Low will then indicate that one, or more, of the memories is busy.

Refer to the Section 10.1: Ready/Busy signal electrical characteristics for details on how to calculate the value of the pull-up resistor.

3.10 V_{DD} supply voltage

 V_{DD} provides the power supply to the internal core of the memory device. It is the main power supply for all operations (read, program and erase).

An internal voltage detector disables all functions whenever V_{DD} is below the V_{LKO} threshold (see *Section Figure 31.: Data Protection*) to protect the device from any involuntary Program/Erase operations during power-transitions.

Each device in a system should have V_{DD} decoupled with a $0.1\mu F$ capacitor. The PCB track widths should be sufficient to carry the required program and erase currents

3.11 V_{SS} ground

Ground, V_{SS}, is the reference for the power supply. It must be connected to the system ground.

 NAND512-A2C Bus operations

4 Bus operations

There are six standard bus operations that control the memory. Each of these is described in this section, see *Table 5: Bus operations*, for a summary.

4.1 Command Input

Command Input bus operations are used to give commands to the memory. Command are accepted when Chip Enable is Low, Command Latch Enable is High, Address Latch Enable is Low and Read Enable is High. They are latched on the rising edge of the Write Enable signal.

Only I/O0 to I/O7 are used to input commands.

See Figure 17 and Table 20 for details of the timings requirements.

4.2 Address Input

Address Input bus operations are used to input the memory address. Three bus cycles are required to input the addresses for the 128Mb and 256Mb devices and four bus cycles are required to input the addresses for the 512Mb and 1Gb devices (refer to *Table 6* and *Table 7*, Address Insertion).

The addresses are accepted when Chip Enable is Low, Address Latch Enable is High, Command Latch Enable is Low and Read Enable is High. They are latched on the rising edge of the Write Enable signal. Only I/O0 to I/O7 are used to input addresses.

See *Figure 18* and *Table 20* for details of the timings requirements.

4.3 Data Input

Data Input bus operations are used to input the data to be programmed.

Data is accepted only when Chip Enable is Low, Address Latch Enable is Low, Command Latch Enable is Low and Read Enable is High. The data is latched on the rising edge of the Write Enable signal. The data is input sequentially using the Write Enable signal.

See Figure 19, Table 20, and Table 21 for details of the timings requirements.

4.4 Data Output

Data Output bus operations are used to read: the data in the memory array, the Status Register, the Electronic Signature and the Serial Number.

Data is output when Chip Enable is Low, Write Enable is High, Address Latch Enable is Low, and Command Latch Enable is Low.

The data is output sequentially using the Read Enable signal.

See Figure 20 and Table 21 for details of the timings requirements.

√ numonyx 15/51

Bus operations NAND512-A2C

4.5 Write Protect

Write Protect bus operations are used to protect the memory against program or erase operations. When the Write Protect signal is Low the device will not accept program or erase operations and so the contents of the memory array cannot be altered. The Write Protect signal is not latched by Write Enable to ensure protection even during power-up.

4.6 Standby

When Chip Enable is High the memory enters Standby mode, the device is deselected, outputs are disabled and power consumption is reduced.

Table 5. Bus operations

Bus Operation	Ē	AL	CL	R	W	WP	1/00 - 1/07	I/O8 - I/O15 ⁽¹⁾
Command Input	V_{IL}	V_{IL}	V_{IH}	V_{IH}	Rising	X ⁽²⁾	Command	Х
Address Input	V_{IL}	V _{IH}	V _{IL}	V_{IH}	Rising	Х	Address	X
Data Input	V_{IL}	V _{IL}	V _{IL}	V_{IH}	Rising	Х	Data Input	Data Input
Data Output	V _{IL}	V _{IL}	V _{IL}	Fallin g	V _{IH}	Х	Data Output	Data Output
Write Protect	Х	Х	Х	Х	Х	V_{IL}	Х	X
Standby	V _{IH}	Х	Х	Х	Х	Х	Х	Х

^{1.} Only for x16 devices.

Table 6. Address Insertion, x8 devices⁽¹⁾⁽²⁾

Bus Cycle	1/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	1/00
1 st	A7	A6	A5	A4	А3	A2	A1	A0
2 nd	A16	A15	A14	A13	A12	A11	A10	A9
3 rd	A24	A23	A22	A21	A20	A19	A18	A17
4 th	V_{IL}	A25						

^{1.} A8 is set Low or High by the 00h or 01h Command, see Section 6.1: Pointer operations.

Table 7. Address Insertion, x16 devices⁽¹⁾⁽²⁾

Bus Cycle	I/O8- I/O15	I/O7	1/06	I/O5	1/04	I/O3	I/O2	I/O1	1/00
1 st	Х	A7	A6	A5	A4	А3	A2	A1	A0
2 nd	Х	A16	A15	A14	A13	A12	A11	A10	A9
3 rd	Х	A24	A23	A22	A21	A20	A19	A18	A17
4 ^{th(4)}	Х	V _{IL}	A25						

^{1.} A8 is Don't Care in x16 devices.

^{2.} $\overline{\text{WP}}$ must be V_{IH} when issuing a program or erase command.

^{2.} Any additional address input cycles will be ignored.

^{2.} Any additional address input cycles will be ignored.

NAND512-A2C Bus operations

Table 8. Address definition

Address	Definition
A0 - A7	Column Address
A9 - A25	Page Address
A9 - A13	Address in Block
A14 - A25	Block Address
A8	A8 is set Low or High by the 00h or 01h Command, and is Don't Care in x16 devices

Command set NAND512-A2C

5 Command set

All bus write operations to the device are interpreted by the Command Interface. The Commands are input on I/O0-I/O7 and are latched on the rising edge of Write Enable when the Command Latch Enable signal is high. Device operations are selected by writing specific commands to the Command Register. The two-step command sequences for program and erase operations are imposed to maximize data security.

The Commands are summarized in Table 9.

Table 9. Commands

Command	Bus V	Command		
Command	1 st CYCLE	2 nd CYCLE	3 rd CYCLE	accepted during busy
Read A	00h	-	-	
Read B ⁽³⁾	01h	-	-	
Read C	50h	-	-	
Read Electronic Signature	90h	-	-	
Read Status Register	70h	-	-	Yes
Page Program	80h	10h	-	
Copy Back Program	00h	8Ah	(10h) ⁽⁴⁾	
Block Erase	60h	D0h	-	
Reset	FFh	-	-	Yes

The bus cycles are only shown for issuing the codes. The cycles required to input the addresses or input/output data are not shown.

^{2.} Any undefined command sequence will be ignored by the device.

^{3.} The Read B command (code 01h) is not used in x16 devices.

^{4.} The Program Confirm command (code 10h) is no more necessary for NAND512-A2C devices. It is optional and has been maintained for backward compatibility

NAND512-A2C Device operations

6 Device operations

6.1 Pointer operations

As the NAND Flash memories contain two different areas for x16 devices and three different areas for x8 devices (see *Figure 6*) the read command codes (00h, 01h, 50h) are used to act as pointers to the different areas of the memory array (they select the most significant column address).


The Read A and Read B commands act as pointers to the main memory area. Their use depends on the bus width of the device.

- In x16 devices the Read A command (00h) sets the pointer to Area A (the whole of the main area) that is Words 0 to 255.
- In x8 devices the Read A command (00h) sets the pointer to Area A (the first half of the main area) that is Bytes 0 to 255, and the Read B command (01h) sets the pointer to Area B (the second half of the main area) that is Bytes 256 to 511.

In both the x8 and x16 devices the Read C command (50h), acts as a pointer to Area C (the spare memory area) that is Bytes 512 to 527 or Words 256 to 263.

Once the Read A and Read C commands have been issued the pointer remains in the respective areas until another pointer code is issued. However, the Read B command is effective for only one operation, once an operation has been executed in Area B the pointer returns automatically to Area A.


The pointer operations can also be used before a program operation, that is the appropriate code (00h, 01h or 50h) can be issued before the program command 80h is issued (see *Figure 7*).

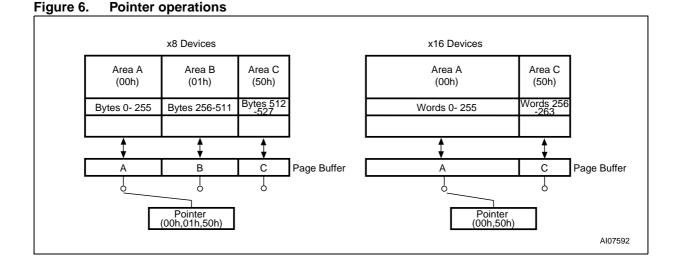

Numonyx 19/51

Device operations NAND512-A2C

Figure 7. Pointer operations for programming

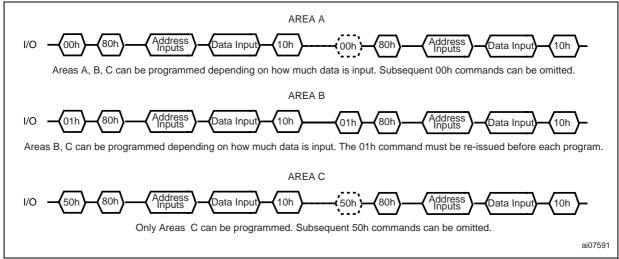

6.2 Read Memory Array

Each operation to read the memory area starts with a pointer operation as shown in the Section 6.1: Pointer operations. Once the area (main or spare) has been selected using the Read A, Read B or Read C commands four bus cycles (for 512Mb and 1Gb devices) or three bus cycles (for 128Mb and 256Mb devices) are required to input the address (refer to Table 6 and Table 7) of the data to be read.

The device defaults to Read A mode after power-up or a Reset operation.

When reading the spare area addresses:

- A0 to A3 (x8 devices)
- A0 to A2 (x16 devices)

are used to set the start address of the spare area while addresses:

- A4 to A7 (x8 devices)
- A3 to A7 (x16 devices)

are ignored.

Once the Read A or Read C commands have been issued they do not need to be reissued for subsequent read operations as the pointer remains in the respective area. However, the Read B command is effective for only one operation, once an operation has been executed in Area B the pointer returns automatically to Area A and so another Read B command is required to start another read operation in Area B.

Once a read command is issued two types of operations are available: Random Read and Page Read.

6.2.1 Random Read


Each time the command is issued the first read is Random Read.

NAND512-A2C Device operations

6.2.2 Page Read


After the Random Read access the page data is transferred to the Page Buffer in a time of t_{WHBH} (refer to *Table 21* for value). Once the transfer is complete the Ready/Busy signal goes High. The data can then be read out sequentially (from selected column address to last column address) by pulsing the Read Enable signal.

Figure 8. Read (A,B,C) operations

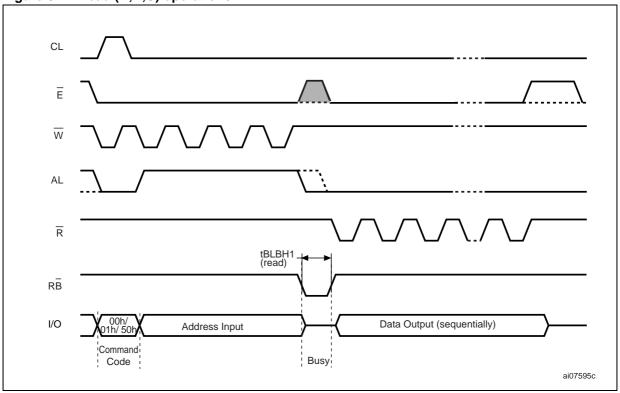

Device operations NAND512-A2C

Figure 9. Read block diagrams

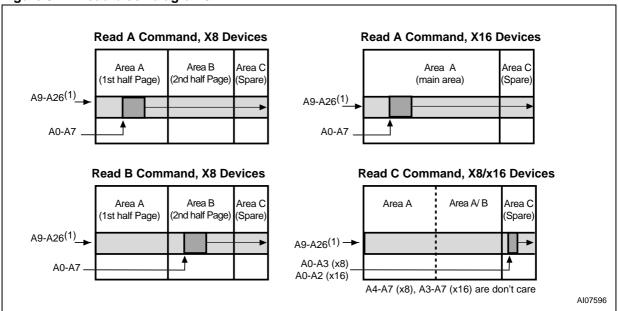

^{1.} Highest address depends on device density.

NAND512-A2C Device operations

6.3 Page Program

The Page Program operation is the standard operation to program data to the memory array.

The main area of the memory array is programmed by page, however partial page programming is allowed where any number of bytes (1 to 528) or words (1 to 264) can be programmed.

The maximum number of consecutive partial page program operations allowed in the same page is three. After exceeding this a Block Erase command must be issued before any further program operations can take place in that page.

Before starting a Page Program operation a Pointer operation can be performed to point to the area to be programmed. Refer to the *Section 6.1: Pointer operations* and *Figure 7* for details.

Each Page Program operation consists of five steps (see *Figure 10*):

- 1. One bus cycle is required to setup the Page Program command
- 2. Four bus cycles are then required to input the program address (refer to *Table 6* and *Table 7*)
- 3. The data is then input (up to 528 Bytes/ 264 Words) and loaded into the Page Buffer
- 4. One bus cycle is required to issue the confirm command to start the P/E/R Controller.
- 5. The P/E/R Controller then programs the data into the array.


Once the program operation has started the Status Register can be read using the Read Status Register command. During program operations the Status Register will only flag errors for bits set to '1' that have not been successfully programmed to '0'.

During the program operation, only the Read Status Register and Reset commands will be accepted, all other commands will be ignored.

Once the program operation has completed the P/E/R Controller bit SR6 is set to '1' and the Ready/Busy signal goes High.

The device remains in Read Status Register mode until another valid command is written to the Command Interface.

Figure 10. Page Program operation

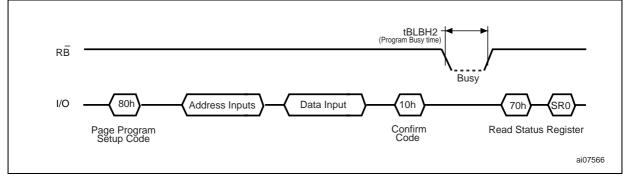

Before starting a Page Program operation a Pointer operation can be performed. Refer to Section 6.1: Pointer operations for details.

Numonyx 23/51

Device operations NAND512-A2C

6.4 Copy Back Program

The Copy Back Program operation is used to copy the data stored in one page and reprogram it in another page.

The Copy Back Program operation does not require external memory and so the operation is faster and more efficient because the reading and loading cycles are not required. The operation is particularly useful when a portion of a block is updated and the rest of the block needs to be copied to the newly assigned block.

If the Copy Back Program operation fails an error is signalled in the Status Register. However as the standard external ECC cannot be used with the Copy Back operation bit error due to charge loss cannot be detected. For this reason it is recommended to limit the number of Copy Back operations on the same data and or to improve the performance of the ECC.

The Copy Back Program operation requires two steps:

- The source page must be read using the Read A command (one bus write cycle to setup the command and then 4 bus write cycles to input the source page address).
 This operation copies all 264 Words/ 528 Bytes from the page into the Page Buffer.
- When the device returns to the ready state (Ready/Busy High), the second bus write
 cycle of the command is given with the 4 bus cycles to input the target page address.
 Refer to *Table 10* for the addresses that must be the same for the Source and Target
 pages.
- 3. The Program Confirm command (code 10h) is no more necessary on NAND512-A2C devices. It is optional and has been maintained for backward compatibility.


After a Copy Back Program operation, a partial-page program is not allowed in the target page until the block has been erased.

See Figure 11 for an example of the Copy Back operation.

Table 10. Copy Back Program addresses

Density	Same Address for Source and Target Pages
512 Mbit	A25

Figure 11. Copy Back operation

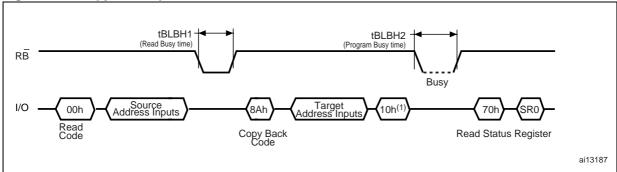

The Program Confirm command (code 10h) is no more necessary on NAND512-A2C devices. It is optional and has been maintained for backward compatibility.

Numonyx

NAND512-A2C Device operations

6.5 Block Erase


Erase operations are done one block at a time. An erase operation sets all of the bits in the addressed block to '1'. All previous data in the block is lost.

An erase operation consists of three steps (refer to Figure 12):

- 1. One bus cycle is required to setup the Block Erase command.
- 2. Only three bus cycles for 512Mb and 1Gb devices, or two for 128Mb and 256Mb devices are required to input the block address. The first cycle (A0 to A7) is not required as only addresses A14 to A25 are valid, A9 to A13 are ignored. In the last address cycle I/O2 to I/O7 must be set to V_{II} .
- One bus cycle is required to issue the confirm command to start the P/E/R Controller.

Once the erase operation has completed the Status Register can be checked for errors.

Figure 12. Block Erase operation

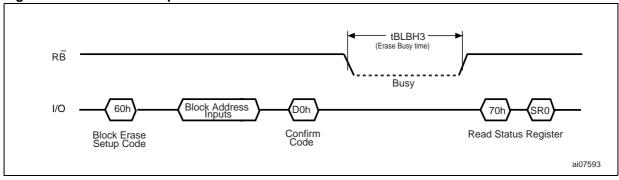

6.6 Reset

The Reset command is used to reset the Command Interface and Status Register. If the Reset command is issued during any operation, the operation will be aborted. If it was a program or erase operation that was aborted, the contents of the memory locations being modified will no longer be valid as the data will be partially programmed or erased.

If the device has already been reset then the new Reset command will not be accepted.

The Ready/Busy signal goes Low for t_{BLBH4} after the Reset command is issued. The value of t_{BLBH4} depends on the operation that the device was performing when the command was issued, refer to *Table 21* for the values.

Device operations NAND512-A2C

6.7 Read Status Register

The device contains a Status Register which provides information on the current or previous Program or Erase operation. The various bits in the Status Register convey information and errors on the operation.

The Status Register is read by issuing the Read Status Register command. The Status Register information is present on the output data bus (I/O0-I/O7) on the falling edge of Chip Enable or Read Enable, whichever occurs last. When several memories are connected in a system, the use of Chip Enable and Read Enable signals allows the system to poll each device separately, even when the Ready/Busy pins are common-wired. It is not necessary to toggle the Chip Enable or Read Enable signals to update the contents of the Status Register.

After the Read Status Register command has been issued, the device remains in Read Status Register mode until another command is issued. Therefore if a Read Status Register command is issued during a Random Read cycle a new read command must be issued to continue with a Page Read.

The Status Register bits are summarized in *Table 11: Status Register bits*. Refer to *Table 11* in conjunction with the following text descriptions.

6.7.1 Write Protection Bit (SR7)

The Write Protection bit can be used to identify if the device is protected or not. If the Write Protection bit is set to '1' the device is not protected and program or erase operations are allowed. If the Write Protection bit is set to '0' the device is protected and program or erase operations are not allowed.

6.7.2 P/E/R Controller Bit (SR6)

The Program/Erase/Read Controller bit indicates whether the P/E/R Controller is active or inactive. When the P/E/R Controller bit is set to '0', the P/E/R Controller is active (device is busy); when the bit is set to '1', the P/E/R Controller is inactive (device is ready).

6.7.3 Error Bit (SR0)

The Error bit is used to identify if any errors have been detected by the P/E/R Controller. The Error Bit is set to '1' when a program or erase operation has failed to write the correct data to the memory. If the Error Bit is set to '0' the operation has completed successfully.

6.7.4 SR5, SR4, SR3, SR2 and SR1 are reserved

NAND512-A2C Device operations

Table 11. Status Register bits

Bit	Name	Logic Level	Definition
SR7	Write Protection	'1'	Not Protected
	Wille Flotection	'0'	Protected
SR6	Program/ Erase/ Read Controller	'1'	P/E/R C inactive, device ready
		'0'	P/E/R C active, device busy
SR5, SR4, SR3, SR2, SR1	Reserved	Don't Care	
SBU	Generic Error	'1'	Error – operation failed
SR0	Generic Elloi	'0'	No Error – operation successful

6.8 Read Electronic Signature

The device contains a Manufacturer Code and Device Code. To read these codes two steps are required:

- 1. first use one Bus Write cycle to issue the Read Electronic Signature command (90h), followed by an address input of 00h.
- 2. then perform two Bus Read operations the first will read the Manufacturer Code and the second, the Device Code. Further Bus Read operations will be ignored.

Refer to Table 12: Electronic signature, for information on the addresses.

Table 12. Electronic signature

Part number	Manufacturer code	Device code
NAND512R3A2C	- 20h	36h
NAND512W3A2C		76h
NAND512R4A2C	0020h	0046h
NAND512W4A2C	0020h	0056h

Software algorithms NAND512-A2C

7 Software algorithms

This section gives information on the software algorithms that Numonyx recommends to implement to manage the Bad Blocks and extend the lifetime of the NAND device.

NAND Flash memories are programmed and erased by Fowler-Nordheim tunneling using a high voltage. Exposing the device to a high voltage for extended periods can cause the oxide layer to be damaged. For this reason, the number of program and erase cycles is limited (see *Table 14* for value) and it is recommended to implement Garbage Collection, a Wear-Leveling Algorithm and an Error Correction Code, to extend the number of program and erase cycles and increase the data retention.

To help integrate a NAND memory into an application Numonyx can provide:

 File System OS Native reference software, which supports the basic commands of file management.

Contact the nearest Numonyx sales office for more details.

7.1 Bad Block management

Devices with Bad Blocks have the same quality level and the same AC and DC characteristics as devices where all the blocks are valid. A Bad Block does not affect the performance of valid blocks because it is isolated from the bit line and common source line by a select transistor.

The devices are supplied with all the locations inside valid blocks erased (FFh). The Bad Block Information is written prior to shipping. Any block where the 6th byte (x8 device) / 1st word (x16 device) in the spare area of the 1st page does not contain FFh is a Bad Block.

The Bad Block Information must be read before any erase is attempted as the Bad Block Information may be erased. For the system to be able to recognize the Bad Blocks based on the original information it is recommended to create a Bad Block table following the flowchart shown in *Figure 13*.

7.2 NAND Flash memory failure modes

Copy Back Program for more details.

Over the lifetime of the device additional Bad Blocks may develop.

To implement a highly reliable system, all the possible failure modes must be considered:

- Program/Erase failure: in this case the block has to be replaced by copying the data to a valid block. These additional Bad Blocks can be identified as attempts to program or erase them will give errors in the Status Register.
 As the failure of a Page Program operation does not affect the data in other pages in the same block, the block can be replaced by re-programming the current data and copying the rest of the replaced block to an available valid block. The Copy Back Program command can be used to copy the data to a valid block. See Section 6.4:
- Read failure: in this case, ECC correction must be implemented. To efficiently use the memory space, it is recommended to recover single-bit error in read by ECC, without replacing the whole block.


Refer to *Table 13* for the procedure to follow if an error occurs during an operation.

🙌 numonyx

Table 13. NAND Flash failure modes

Operation	Procedure
Erase	Block Replacement
Program	Block Replacement or ECC
Read	ECC

Figure 13. Bad Block management flowchart

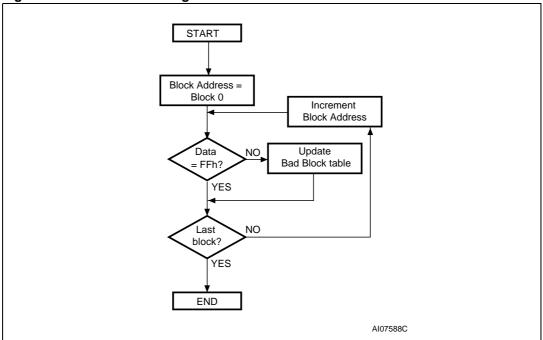


Software algorithms NAND512-A2C

7.3 Garbage collection

When a data page needs to be modified, it is faster to write to the first available page, and the previous page is marked as invalid. After several updates it is necessary to remove invalid pages to free some memory space.

To free this memory space and allow further program operations it is recommended to implement a Garbage Collection algorithm. In a Garbage Collection software the valid pages are copied into a free area and the block containing the invalid pages is erased (see *Figure 14*).

Figure 14. Garbage collection

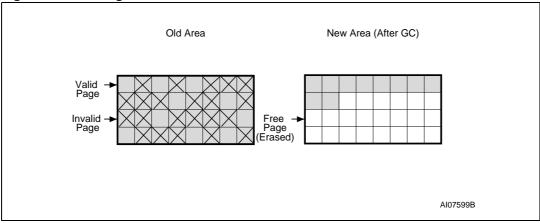

7.4 Wear-leveling algorithm

For write-intensive applications, it is recommended to implement a Wear-leveling Algorithm to monitor and spread the number of write cycles per block.

In memories that do not use a Wear-Leveling Algorithm not all blocks get used at the same rate. Blocks with long-lived data do not endure as many write cycles as the blocks with frequently-changed data.

The Wear-leveling Algorithm ensures that equal use is made of all the available write cycles for each block. There are two wear-leveling levels:

- First Level Wear-leveling, new data is programmed to the free blocks that have had the fewest write cycles
- Second Level Wear-leveling, long-lived data is copied to another block so that the original block can be used for more frequently-changed data.

The Second Level Wear-leveling is triggered when the difference between the maximum and the minimum number of write cycles per block reaches a specific threshold.

7.5 Error Correction Code

An Error Correction Code (ECC) can be implemented in the Nand Flash memories to identify and correct errors in the data.


For every 2048 bits in the device it is recommended to implement 22 bits of ECC (16 bits for line parity plus 6 bits for column parity).

30/51 **№** numonyx

Free Datasheet http://www.datasheet4u.com/

An ECC model is available in VHDL or Verilog. Contact the nearest Numonyx sales office for more details.

Figure 15. Error Detection

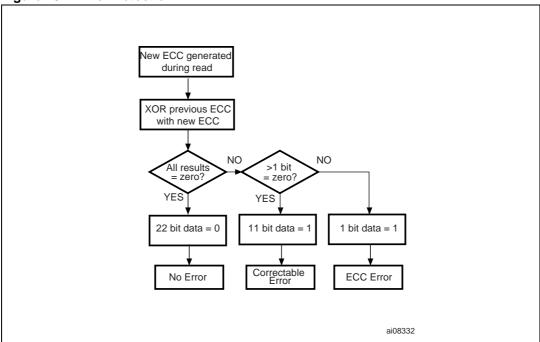

7.6 Hardware simulation models

7.6.1 Behavioral simulation models

Denali Software Corporation models are platform independent functional models designed to assist customers in performing entire system simulations (typical VHDL/Verilog). These models describe the logic behavior and timings of NAND Flash devices, and so allow software to be developed before hardware.

7.6.2 IBIS simulations models

IBIS (I/O Buffer Information Specification) models describe the behavior of the I/O buffers and electrical characteristics of Flash devices.

These models provide information such as AC characteristics, rise/fall times and package mechanical data, all of which are measured or simulated at voltage and temperature ranges wider than those allowed by target specifications.

IBIS models are used to simulate PCB connections and can be used to resolve compatibility issues when upgrading devices. They can be imported into SPICETOOLS.

8 Program and erase times and endurance cycles

The Program and Erase times and the number of Program/ Erase cycles per block are shown in *Table 14*.

Table 14. Program, Erase Times and Program Erase Endurance Cycles

Parameters		Unit		
raiailleteis	Min	Тур	Max	Onit
Page Program Time		200	500	μs
Block Erase Time		2	3	ms
Program/Erase Cycles per block (with ECC)	100,000			cycles
Data Retention	10			years

NAND512-A2C Maximum rating

9 Maximum rating

Stressing the device above the ratings listed in *Table 15: Absolute Maximum Ratings*, may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. Refer also to the Numonyx SURE Program and other relevant quality documents.

Table 15. Absolute Maximum Ratings

Cumbal	Devemete	Va	l lmit		
Symbol	Paramete		Min	Max	Unit
T _{BIAS}	Temperature Under Bias	Temperature Under Bias		125	°C
T _{STG}	Storage Temperature		- 65	150	°C
T _{LEAD}	Lead temperature during s	Lead temperature during soldering		260	°C
V _{IO} ⁽¹⁾	Input or Output Voltage	1.8V devices	- 0.6	2.7	V
νIO, ,	Input or Output Voltage	3 V devices	- 0.6	4.6	V
V	Supply Voltage	1.8V devices	- 0.6	2.7	V
V_{DD}	Supply Voltage 3 V devices		- 0.6	4.6	V

^{1.} Minimum Voltage may undershoot to -2V for less than 20ns during transitions on input and I/O pins. Maximum voltage may overshoot to V_{DD} + 2V for less than 20ns during transitions on I/O pins.

10 DC and AC parameters

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measurement Conditions summarized in *Table 16: Operating and AC measurement conditions*. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

Table 16. Operating and AC measurement conditions

Parameter		NAND	Flash	Unito
Parameter		Min	Max	Units
Supply Voltage (V	1.8 V devices	1.7	1.95	V
Supply Voltage (V _{DD})	3 V devices	2.7	3.6	V
Ambient Temperature (T _A)	Grade 6	-40	85	°C
Load Capacitance (C _L) (1 TTL GATE	1.8 V devices	30		pF
and C _L)	3 V devices	5	Max Units 1.95 ∨ 3.6 ∨ 85 °C 0 pF 0 pF V _{DD} ∨ 2.4 ∨ .5 ∨ 5 ns	pF
Input Pulsos Valtages	1.8 V devices	0	V _{DD}	V
Input Pulses Voltages	3 V devices	0.4	2.4	V
Input and Output Timing Bof Voltages	1.8 V devices	0	0.9	
Input and Output Timing Ref. Voltages	3 V devices	1.5		V
Input Rise and Fall Times		5		ns
Output Circuit Resistors, R _{ref}		8.	35	kΩ

Table 17. Capacitance⁽¹⁾⁽²⁾

Symbol	Parameter	Test Condition	Тур	Max	Unit
C _{IN}	Input Capacitance	V _{IN} = 0 V		10	pF
C _{I/O}	Input/Output Capacitance	V _{IL} = 0 V		10	pF

^{1.} T_A = 25 °C, f = 1 MHz. C_{IN} and $C_{I/O}$ are not 100% tested.

^{2.} Input/Output capacitances double on stacked devices.

Table 18. DC characteristics, 1.8 V devices⁽¹⁾

Symbol	Paramete	er	Test Conditions	Min	Тур	Max	Unit
I _{DD1}	0 1 0 1	Sequential Read	t_{RLRL} minimum $\overline{E} = V_{IL}$, $I_{OUT} = 0$ mA	-	8	15	mA
I _{DD2}	Operating Current	Program	-	-	8	15	mA
I _{DD3}		Erase	-	-	8	15	mA
I _{DD5}	Stand-By Current (CMOS)		E=V _{DD} -0.2, ₩P=0/V _{DD}	-	10	50	μA
I _{LI}	Input Leakage Current		V _{IN} = 0 to V _{DD} max	-	-	±10	μA
I _{LO}	Output Leakage Current		V _{OUT} = 0 to V _{DD} max	-	-	±10	μA
V _{IH}	Input High Vo	ltage	-	V _{DD} -0.4	-	V _{DD} +0.3	V
V _{IL}	Input Low Vo	Itage	-	-0.3	-	0.4	V
V _{OH}	Output High Volta	age Level	I _{OH} = -100 μA	V _{DD} -0.1	-	-	V
V _{OL}	Output Low Volta	ige Level	I _{OL} = 100 μA	-	-	0.1	V
I _{OL} (RB)	Output Low Current (RB)		V _{OL} = 0.1 V	3	4		mA
V _{LKO}	V _{DD} Supply Voltage Program loc		-	-	-	1.1	V

^{1.} Leakage currents double on stacked devices.

Figure 16. Equivalent testing circuit for AC characteristics measurement

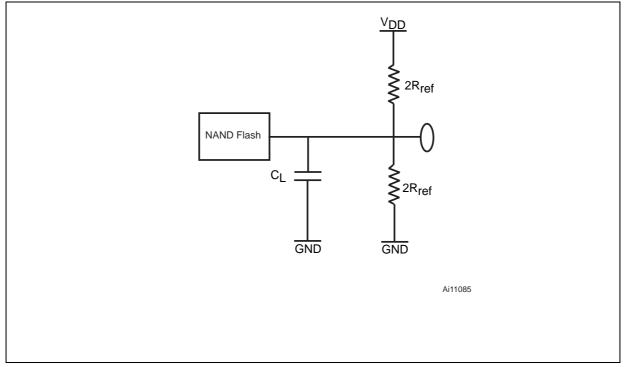


Table 19. DC Characteristics, 3V devices⁽¹⁾

Symbol	Paramet	er	Test Conditions	Min	Тур	Max	Unit
I _{DD1}	Operating	Sequential Read	t_{RLRL} minimum $\overline{E} = V_{IL}$, $I_{OUT} = 0$ mA	-	10	20	mA
I _{DD2}	Current	Program	-	-	10	20	mA
I _{DD3}		Erase	-	-	10	20	mA
I _{DD4}	Stand-by Curre	nt (TTL),	E=V _{IH} , WP=0V/V _{DD}	-	-	1	mA
I _{DD5}	Stand-By Curren	t (CMOS)	$\overline{E} = V_{DD} - 0.2, \ \overline{WP} = 0/V_{DD}$	-	10	50	μA
I _{LI}	Input Leakage Current		V _{IN} = 0 to V _{DD} max	-	-	±10	μA
I _{LO}	Output Leakage Current		V _{OUT} = 0 to V _{DD} max	-	-	±10	μA
V _{IH}	Input High Voltage		-	2.0	-	V _{DD} +0.3	V
V _{IL}	Input Low Voltage		-	-0.3	-	0.8	V
V _{OH}	Output High Volt	age Level	$I_{OH} = -400 \mu A$	2.4	-	-	V
V _{OL}	Output Low Voltage Level		I _{OL} = 2.1mA	-	-	0.4	V
I _{OL} (RB)	Output Low Current (RB)		V _{OL} = 0.4V	8	10		mA
V _{LKO}	V _{DD} Supply Voltage Program loc	•	-	-	-	1.7	V

^{1.} Leakage currents double on stacked devices.

Table 20. AC characteristics for Command, Address, Data Input

Symbol	Alt. Symbol	Parameter			1.8V devices	3V devices	Unit
t _{ALLWH}	+	Address Latch Low to Write Enable High	Al Cotup time	Min	25	15	no
t _{ALHWH}	t _{ALS}	Address Latch High to Write Enable High	AL Setup time	IVIIII	25	15	ns
t _{CLHWH}	4	Command Latch High to Write Enable High	Cl. Saturations	Min	25	15	20
t _{CLLWH}	t _{CLS}	Command Latch Low to Write Enable High	CL Setup time	IVIIII	25	15	ns
t _{DVWH}	t _{DS}	Data Valid to Write Enable High	Data Setup time	Min	20	15	ns
t _{ELWH}	t _{CS}	Chip Enable Low to Write Enable High	E Setup time	Min	30	20	ns
t _{WHALH}	4	Write Enable High to Address Latch High	AL Hold time	Min	10	5	20
t _{WHALL}	t _{ALH}	Write Enable High to Address Latch Low	AL Hold time	IVIIII	10	5	ns
t _{WHCLH}		Write Enable High to Command Latch High		N 4:	40	Г	
t _{WHCLL}	t _{CLH}	Write Enable High to Command Latch Low	CL hold time	Min	10	5	ns
t _{WHDX}	t _{DH}	Write Enable High to Data Transition	Data Hold time	Min	10	5	ns
t _{WHEH}	t _{CH}	Write Enable High to Chip Enable High	E Hold time	Min	10	5	ns
t _{WHWL}	t _{WH}	Write Enable High to Write Enable Low	W High Hold time	Min	15	10	ns
t _{WLWH}	t _{WP}	Write Enable Low to Write Enable High	W Pulse Width	Min	25	15	ns
t _{WLWL}	t _{WC}	Write Enable Low to Write Enable Low	Write Cycle time	Min	45	30	ns

Table 21. AC Characteristics for operations

Symbol	Alt. Symbol		1.8V devices	3V devices	Unit		
t _{ALLRL1}	t	Address Latch Low to	Read Electronic Signature	Min	10	10	ns
t _{ALLRL2}	t _{AR}	Read Enable Low	Read cycle	Min	10	10	ns
t _{BHRL}	t _{RR}	Ready/Busy High to Read Enable Low			20	20	ns
t _{BLBH1}			Read Busy time	Max	15	12	μs
t _{BLBH2}	t _{PROG}		Program Busy time	Max	500	500	μs
t _{BLBH3}	t _{BERS}		Erase Busy time	Max	3	3	ms
t _{BLBH4}	t _{RST}	Ready/Busy Low to Ready/Busy High	Reset Busy time, during ready		5	5	μs
			Reset Busy time, during read		5	5	μs
			Reset Busy time, during program	Max	10	10	μs
			Reset Busy time, during erase		500	500	μs
t _{CLLRL}	t _{CLR}	Command Latch Low to Read Enable Low			10	10	ns
t _{DZRL}	t _{IR}	Data Hi-Z to Read Ena	Min	0	0	ns	
t _{EHQZ}	t _{CHZ}	Chip Enable High to Output Hi-Z			30	30	ns
t _{ELQV}	t _{CEA}	Chip Enable Low to Output Valid			45	35	ns
t _{RHRL}	t _{REH}	Read Enable High to Read Enable Low Read Enable High Hold time		Min	15	10	ns
t _{RHQZ}	t _{RHZ}	Read Enable High to Output Hi-Z			30	30	ns
t _{EHQX}	T	Chip Enable high or Read Enable high to Output Hold			10	10	20
t _{RHQX}	T _{OH}	Chip Enable high of Re	ead Enable high to Output Hold	Min	10	10	ns
t _{RLRH}	t _{RP}	Read Enable Low to Read Enable High	Read Enable Pulse Width	Min	25	15	ns
t _{RLRL}	t _{RC}	Read Enable Low to Read Enable Low	Read Cycle time	Min	50	30	ns
t _{RLQV}	t _{REA}	Read Enable Low to Output Valid	Read Enable Access time		30	18	ns
			Read ES Access time ⁽¹⁾	Max			
t _{WHBH}	t _R	Write Enable High to Ready/Busy High	Read Busy time	Max	15	12	μs
t _{WHBL}	t _{WB}	Write Enable High to Ready/Busy Low			100	100	ns
t _{WHRL}	t _{WHR}	Write Enable High to Read Enable Low			60	60	ns

^{1.} ES = Electronic Signature.

Figure 17. Command Latch AC waveforms

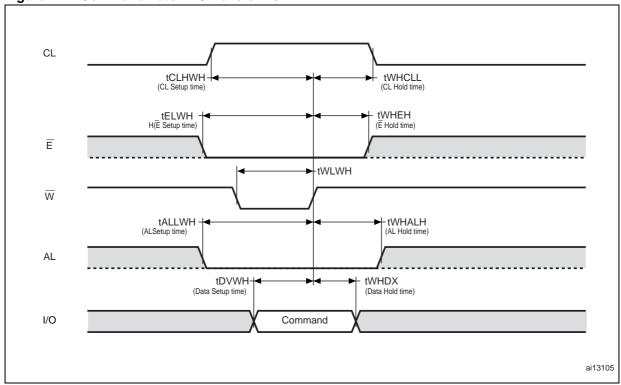


Figure 18. Address Latch AC waveforms

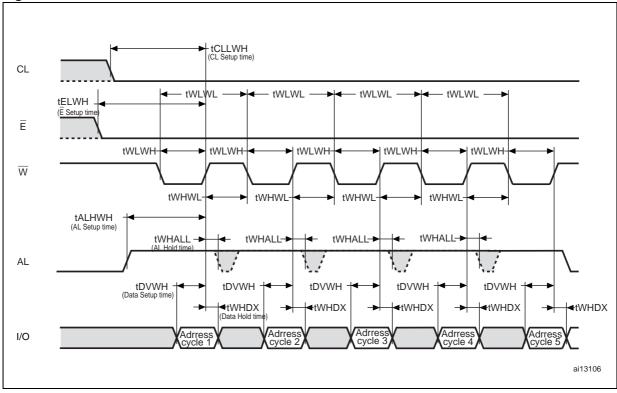


Figure 19. Data Input Latch AC waveforms


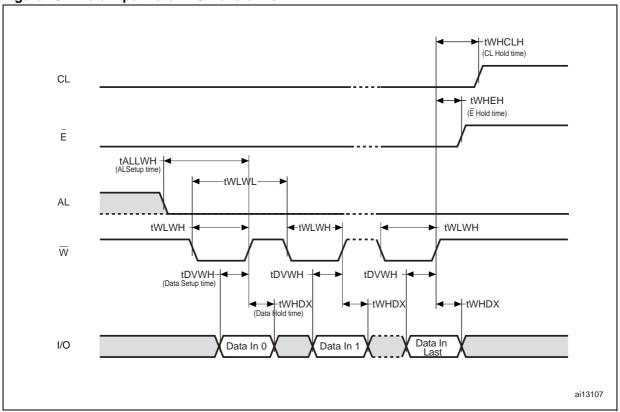


Figure 20. Sequential Data Output after Read AC waveforms

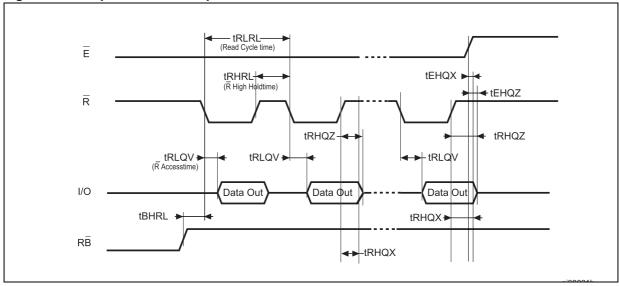

1. CL = Low, AL = Low, $\overline{W} = High$.

Figure 21. Read Status Register AC waveforms


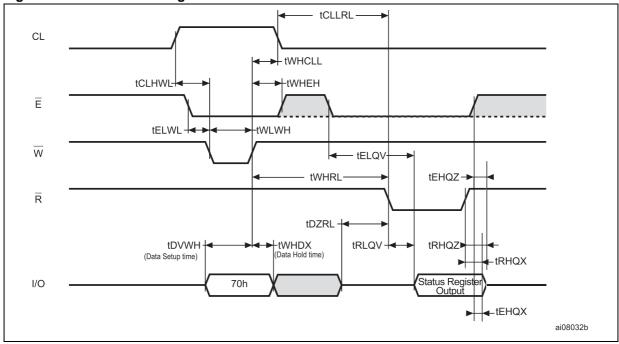


Figure 22. Read Electronic Signature AC waveform

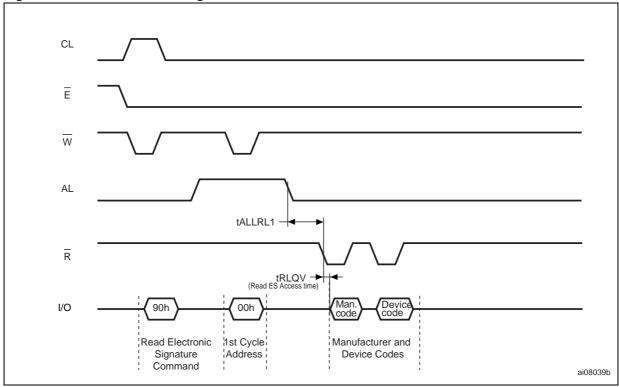

1. Refer to *Table 12* for the values of the Manufacturer and Device Codes.

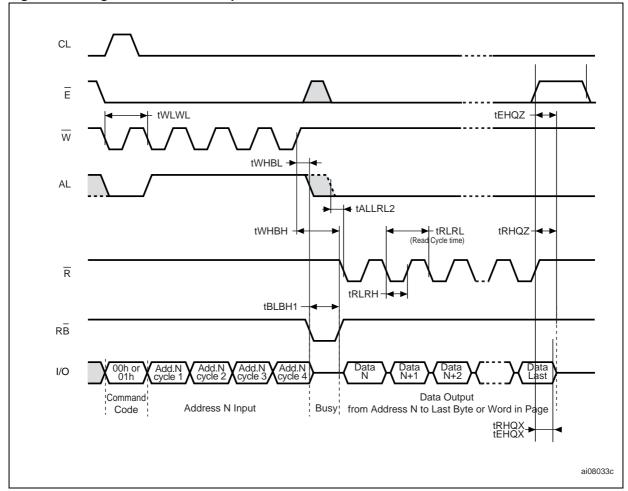


Figure 23. Page Read A/ Read B operation AC waveform

Numonyx 41/51

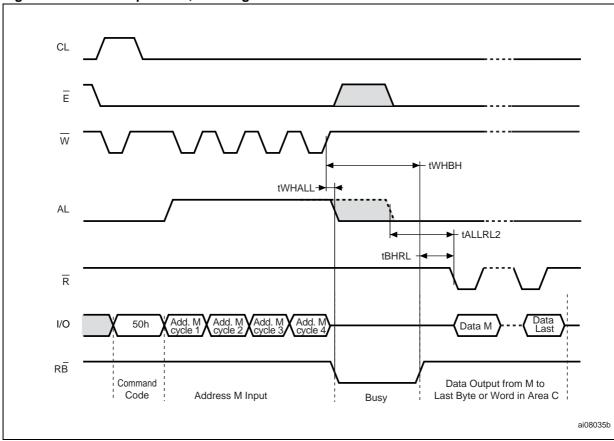


Figure 24. Read C operation, One Page AC waveform

1. A0-A7 is the address in the Spare Memory area, where A0-A3 are valid and A4-A7 are 'don't care'.

CL Ē tWLWL (Write Cycle time) - tWLWL - tWLWL $\overline{\mathsf{W}}$ tWHBL tBLBH2 -(Program Busy time) ΑL $\overline{\mathsf{R}}$ I/O RBPage Program Setup Code Page | Program | Read Status Register Address Input ai08037

Figure 25. Page Program AC waveform

43/51 **N** numonyx

Figure 26. Block Erase AC waveform


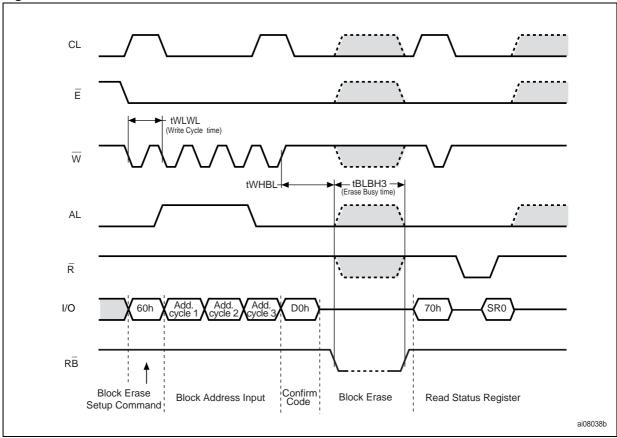


Figure 27. Reset AC waveform

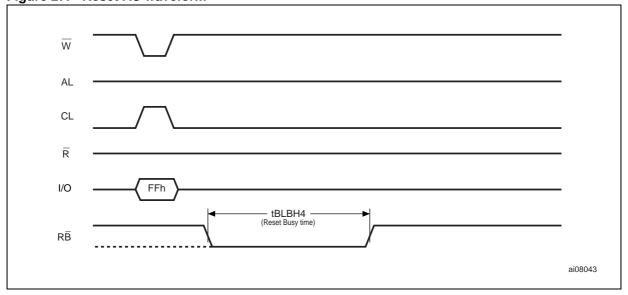

10.1 Ready/Busy signal electrical characteristics

Figure 28, Figure 29 and *Figure 30* show the electrical characteristics for the Ready/Busy signal. The value required for the resistor R_P can be calculated using the following equation:

$$R_{P}min = \frac{(V_{DDmax} - V_{OLmax})}{I_{OL} + I_{L}}$$

So,

$$R_{p}min(1.8V) = \frac{1.85V}{3mA + I_{L}}$$

$$R_{p}min(3V) = \frac{3.2V}{8mA + I_{L}}$$

where I_L is the sum of the input currents of all the devices tied to the Ready/Busy signal. R_P max is determined by the maximum value of t_r .

Figure 28. Ready/Busy AC waveform


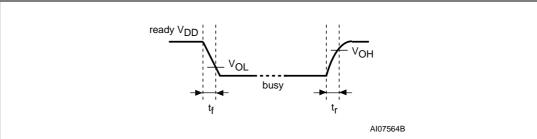


Figure 29. Ready/Busy load circuit

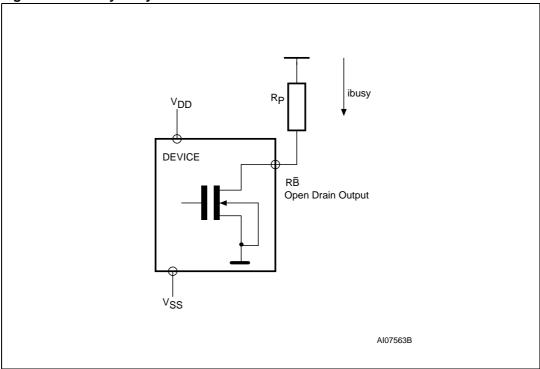

Numonyx 45/51

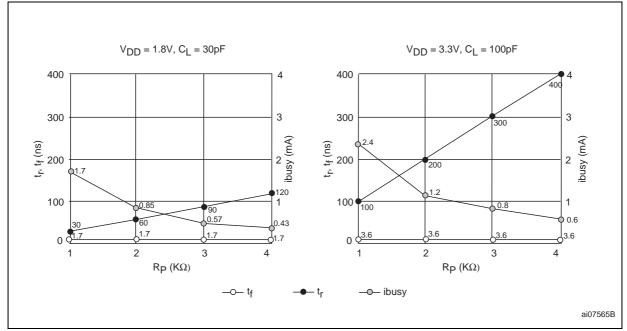


Figure 30. Resistor value versus waveform timings for Ready/Busy signal

1. T = 25°C.

10.2 Data Protection

The Numonyx NAND device is designed to guarantee Data Protection during Power Transitions.


A V_{DD} detection circuit disables all NAND operations, if V_{DD} is below the V_{LKO} threshold.

In the V_{DD} range from V_{LKO} to the lower limit of nominal range, the \overline{WP} pin should be kept low (V_{IL}) to guarantee hardware protection during power transitions as shown in the below figure.

VDD Nominal Range VLKO Locked Locked Ai13188

11 Package mechanical

Figure 32. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package outline

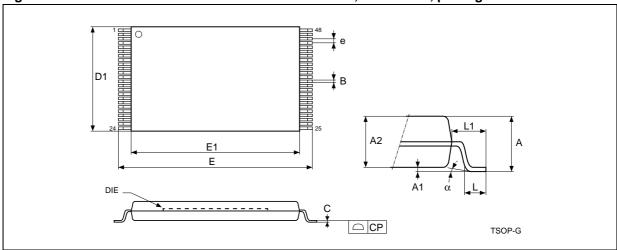

1. Drawing is not to scale.

Table 22. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package mechanical data

Symbol		millimeters		inches			
Symbol	Тур	Min	Max	Тур	Min	Max	
А			1.200			0.0472	
A1	0.100	0.050	0.150	0.0039	0.0020	0.0059	
A2	1.000	0.950	1.050	0.0394	0.0374	0.0413	
В	0.220	0.170	0.270	0.0087	0.0067	0.0106	
С		0.100	0.210		0.0039	0.0083	
CP			0.080			0.0031	
D1	12.000	11.900	12.100	0.4724	0.4685	0.4764	
E	20.000	19.800	20.200	0.7874	0.7795	0.7953	
E1	18.400	18.300	18.500	0.7244	0.7205	0.7283	
е	0.500	-	_	0.0197	_	_	
L	0.600	0.500	0.700	0.0236	0.0197	0.0276	
L1	0.800			0.0315			
α	3°	0°	5°	3°	0°	5°	

Numonyx 47/51

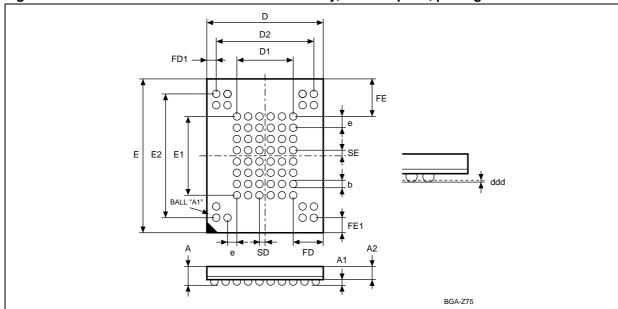



Figure 33. VFBGA63 9x11mm - 6x8 active ball array, 0.80mm pitch, package outline

1. Drawing is not to scale.

Table 23. VFBGA63 9x11mm - 6x8 active ball array, 0.80mm pitch, package mechanical data

Comple at	millimeters				inches			
Symbol	Тур	Min	Max	Тур	Min	Max		
А			1.05			0.041		
A1		0.25			0.010			
A2			0.70			0.028		
b	0.45	0.40	0.50	0.018	0.016	0.020		
D	9.00	8.90	9.10	0.354	0.350	0.358		
D1	4.00			0.157				
D2	7.20			0.283				
ddd			0.10			0.004		
E	11.00	10.90	11.10	0.433	0.429	0.437		
E1	5.60			0.220				
E2	8.80			0.346				
е	0.80	_	_	0.031	-	_		
FD	2.50			0.098				
FD1	0.90			0.035				
FE	2.70			0.106				
FE1	1.10			0.043				
SD	0.40	_	_	0.016	-	_		
SE	0.40	_	_	0.016	-	_		

12 Ordering information

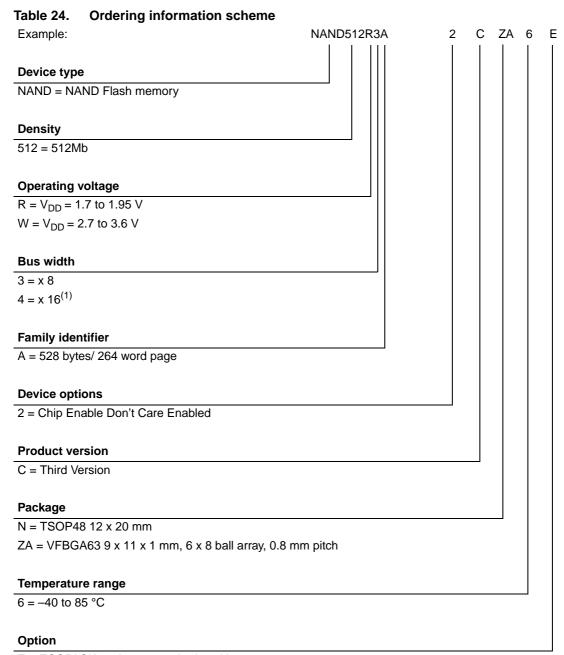

E = ECOPACK package, standard packing

F = ECOPACK package, tape & reel packing

1. x16 organization available for MCP only.

Devices are shipped from the factory with the memory content bits, in valid blocks, erased to '1'. For further information on any aspect of this device, please contact your nearest Numonyx Sales Office.

Numonyx 49/51

Revision history NAND512-A2C

13 Revision history

Table 25. Document revision history

Date	Revision	Changes			
26-Oct-2006	0.1	Initial release.			
08-Feb-2007 1		Datasheet status upgraded to 'Full datasheet'. USOP48 package removed. Data integrity of 100,000 specified for ECC implemented. t _{WHBH1} removed from <i>Table 21: AC Characteristics for operations</i> .			
04-Jan-2008	2	Applied Numonyx branding.			

Please Read Carefully:

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH NUMONYX™ PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN NUMONYX'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NUMONYX ASSUMES NO LIABILITY WHATSOEVER, AND NUMONYX DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF NUMONYX PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

Numonyx products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Numonyx may make changes to specifications and product descriptions at any time, without notice.

Numonyx, B.V. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Numonyx reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Contact your local Numonyx sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Numonyx literature may be obtained by visiting Numonyx's website at http://www.numonyx.com.

Numonyx StrataFlash is a trademark or registered trademark of Numonyx or its subsidiaries in the United States and other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 11/5/7, Numonyx B.V. All Rights Reserved.