


# Si photodiode evaluation circuit **C9052 series**

# Easy-to-use circuit for Si photodiode operation

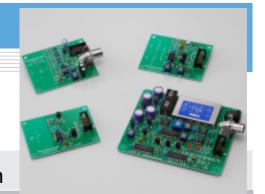

# **Features**

- Allows easy evaluation of standard Si photodiodes
- On-board circuit examples for typical applications of Si photodiodes
- Multiple circuits assembled on one board
- Support board (C9052-04 with dedicated cable A9053) for processing output signals from head board (C9052-01/-02/-03 with dedicated cable A9053-01)

# Applications

- Testing and evaluation of standard Si photodiodes
- Simple optical power meters

Absolute maximum rating

| Parameter              | Symbol   | C9052-01   | C9052-02 | C9052-03 | C9052-04 | Unit |
|------------------------|----------|------------|----------|----------|----------|------|
| Maximum supply voltage | Vcc Max. | ±15        |          | +15      | +12      | V    |
| Operating temperature  | Topr     | +10 to +40 |          |          | °C       |      |
| Storage temperature    | Tstg     | 0 to +50   |          |          | °C       |      |

| 00        | 0E0 | $^{\Lambda}$ |
|-----------|-----|--------------|
| <b>U9</b> | 052 | -U I         |

Low noise AC amplifier circuit, photocurrent-to-voltage conversion circuit and wide band amplifier circuit on one board

| Circuit configuration          | Features  |
|--------------------------------|---|
| Low noise AC amplifier circuit | Low noise AC amplifier circuit using FET, bandwidth 160 to 1 MHz, trans-impedance 15 kV/A     |
| Photocurrent-to-voltage        | Current-to-voltage conversion circuit with bandwidth of DC to 100 kHz and feedback resistance |
| conversion circuit             | of 100 kΩ   |
| Wide band amplifier circuit    | Amplifier circuit with bandwidth of DC to 1 MHz and trans-impedance of 30 kV/A                |

<sup>&</sup>lt;Usable photodiodes>

Standard Si PIN photodiodes with metal package (TO-18, TO-5, TO-8): S5821 series, etc.

# C9052-02

Light balance detection circuit, light-to-logarithmic voltage conversion circuit and light integration circuit on one board

| Circuit configuration                           | Features   |
|---|--|
| I lant naighed adtection circuit                | Detects output balance between two photodiodes when light enters them and outputs the light level difference as a voltage. |
| Light-to-logarithmic voltage conversion circuit | Outputs a voltage in proportion to logarithmic change in detected light level  |
| Light integration circuit                       | Converts input pulsed light of constant cycle into DC signal. Controlled by external integration reset pulses.             |

<sup>&</sup>lt;Usable photodiodes>

Standard Si photodiodes with metal package (TO-18, TO-5, TO-8): S2386 series, etc.

Standard Si photodiodes with ceramic package (except -16BQ/-16BK/-16BR types): S1337-1010BR, S1227-1010BR, etc.

### C9052-03

Two types of light-to-frequency conversion circuits assembled on one board

| Two types of light-to-frequency conversion circuits assembled on one board |   |  |  |
|--|---|--|--|
| Circuit configuration  | Features  |  |  |
| High illuminance type  | Interface circuit that outputs pulses at frequency proportional to input light from 100 to 10,000 lx. |  |  |
| Low illuminance type   | Interface circuit that outputs pulses at frequency proportional to input light from 1 to 200 lx.      |  |  |

<sup>&</sup>lt;Usable photodiodes>

S1087 (high illuminance type), S2386-5K (low illuminance type)

PRELIMINARY DATA Aug. 2002



# Si photodiode evaluation circuit C9052 series


# C9052-04

Power supply circuit for driving C9052-01/-02/-03 and output processing circuit assembled together.

| Circuit configuration        | Feature   | Connectable product |
|------------------------------|---|---------------------|
| Power supply circuit         | Supplies constant voltage to each head board.<br>C9052-01/-02: ±12 V, C9052-03: +12 V   | C9052-01/-02/-03    |
| Sample-and-hold circuit *    | Samples and holds the output signal of head board in synchronization with input light.  | C9052-01/-02        |
| Peak hold circuit *          | Holds peak values of head board output signal.  | C9052-01/-02        |
| Integration reset circuit    | Reset pulse generator circuit for integration circuit output.  Operates in synchronization with input light and sample-and-hold circuit.            | C9052-02            |
| Imbalance indication circuit | Monitor circuit for light balance detection circuit. Indicator LED lights up when difference between two photodiodes exceeds a specified level.     | C9052-02            |
| Frequency counter circuit    | Counts the number of output pulses from a frequency conversion circuit and turns on the indicator LED in a lighting cycle according to light level. | C9052-03            |

<sup>\*</sup> The sample-and-hold circuit and peak hold circuit can be selected to replace the jumpsocket.


## ■ Circuit connection

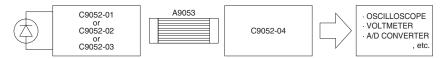

NOTE) Photodiode is sold separately.

KACCC0183EA

# ■ Dimensional outlines (unit: mm)

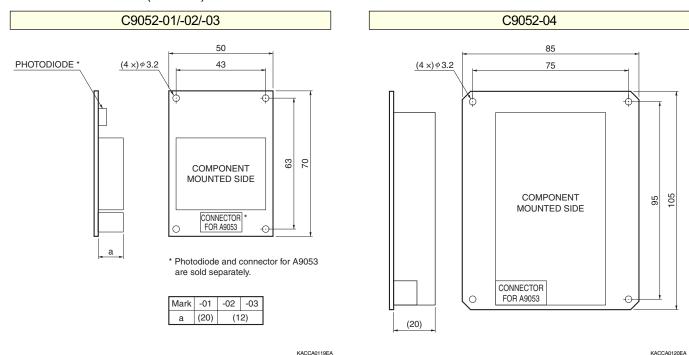

# Accessory

Dedicated AC adapter (C9052-04 only)

Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein. ©2002 Hamamatsu Photonics K.K.

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Hamamatsu City, 435-8558 Japan, Telephone: (81) 053-434-3311, Fax: (81) 053-434-5184, http://www.hamamatsu.com U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P.O.Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218 Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 08152-3750, Fax: (49) 08152-2658
France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777

North Europe: Hamamatsu Photonics Norden AB: Smidesvägen 12, SE-171 41 Solna, Sweden, Telephone: (46) 8-509-031-00, Fax: (46) 8-509-031-01

Italy: Hamamatsu Photonics Italia S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39) 02-935-81-733, Fax: (39) 02-935-81-741

Cat. No. KACC1083E03 Nov. 2002 DN