

**ROITHNER LASERTECHNIK**

Wiedner Hauptstraße 76, A-1040 Vienna, Austria

Tel.: +43 1 586 52 43-0, Fax -44, office@roithner-laser.com



RLT650-200G

TECHNICAL DATA



High Power Visible Laser Diode

Features

- Lasing Mode Structure: multi mode
- Peak Wavelength : typ. 650 nm
- Optical Output Power: 200 mW
- Package: 9 mm



Electrical Connection

Pin Configuration		Bottom View								
	n-type <table border="1"><thead><tr><th>PIN</th><th>Function</th></tr></thead><tbody><tr><td>1</td><td>LD Cathode</td></tr><tr><td>2</td><td>LD Anode, PD Cathode</td></tr><tr><td>3</td><td>PD Anode</td></tr></tbody></table>	PIN	Function	1	LD Cathode	2	LD Anode, PD Cathode	3	PD Anode	
PIN	Function									
1	LD Cathode									
2	LD Anode, PD Cathode									
3	PD Anode									

Absolute Maximum Ratings ($T_C=20^\circ\text{C}$)

Item	Symbol	Value	Unit
CW Output Power	P_O	200	mW
Operating Case Temperature	T_C	-20 ... +25	°C
Storage Temperature	T_{stg}	-40 ... +85	°C

Specifications ($T_C=20^\circ\text{C}$)

Item	Symbol	Min.	Typ.	Max.	Unit
Optical Specifications					
CW Output Power	P_O	-	200	-	mW
Center Wavelength	λ_C	645	650	660	nm
Spectral Width (FWHM)	$\Delta\lambda$	-	1	2.5	nm
Wavelength Temperature Coefficient	$\partial\lambda / \partial T$	-	0.25	-	nm/°C
FWHM Beam Divergence	θ_{\parallel}	-	8	10	deg
	θ_{\perp}	-	36	40	deg
Emitting Aperture	$W \times H$		100 x 1		μm
Polarization			TE		
Lifetime		5000	-	-	hour
Electrical Specifications					
Threshold Current	I_{th}	-	550	600	mA
Operating Current	I_{op}	-	820	900	mA
Slope Efficiency	η	0.85	0.90	-	W/A
Operating Voltage	U_{op}	-	2.1	2.3	V
Series Resistance	R_d	-	0.8	-	Ω
Monitor Current	I_m	0.2	-	0.5	mA

The above specifications are for reference purpose only and subjected to change without prior notice.




ROITHNER LASERTECHNIK

Wiedner Hauptstraße 76, A-1040 Vienna, Austria

Tel.: ++43 1 586 52 43-0, Fax -44, office@roithner-laser.com



Package Dimensions

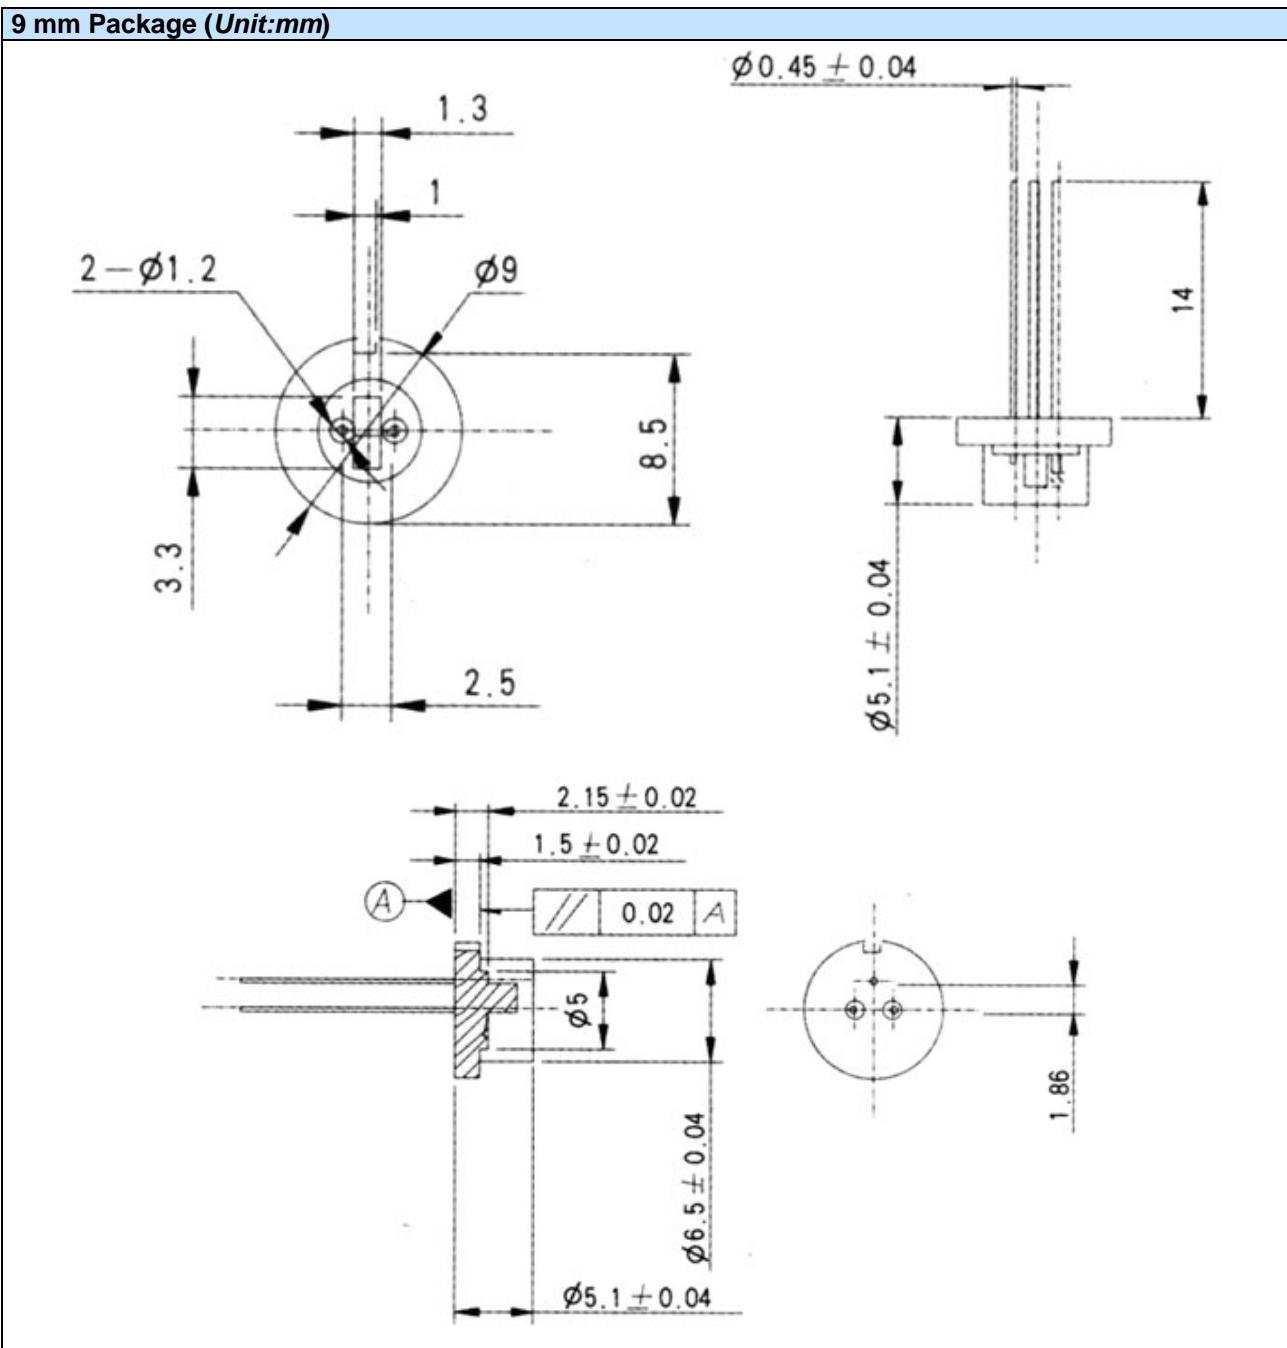



Safety of Laser light

- Laser Light can damage the human eyes and skin. Do not expose the eye or skin directly to any laser light and/or through optical lens. When handling the LDs, wear appropriate safety glasses to prevent laser light, even any reflections from entering to the eye. Focused laser beam through optical instruments will increase the chance of eye hazard.



Cautions

1. Operating methode

- This LD shall change its forward voltage requirement and optical output power according to temperature change. Also, the LD will require more operation current to maintain same output power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by switching on and off does not exceed the maximum operating current level specified herein above as absolute maximum rating. Also, employ appropriate countermeasures to reduce chattering and/or overshooting in the circuit.

2. Static Electricity

- Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handling the product.

3. Absolute Maximum Rating

- Active layer of LDs shall have high current density and generate high electric field during its operation. In order to prevent excessive damage, the LD must be operated strictly below absolute maximum rating.

